

Datasheet for #sbcw4822 DN

Recommendations:

Please read the User Manual and have a look at the FAQ at <https://www.alpeslasers.ch/resources/#faq>

WARNING: Operating the laser with higher current or voltage than specified in this document may cause damage and will result in loss of warranty, unless Alpes Lasers has permitted to do so!

WARNING: Beware of the polarity of the laser. This laser has to be powered with negative current on the laser contact (= bonding pad, corresponding to the label "laser" on the LLH) and the positive current on the base contact (= submount, corresponding to the label "base" on the LLH). To be used with a high compliance CW laser driver capable of reaching the operating current and voltage indicated in this datasheet, or up to 2.5A/20V.

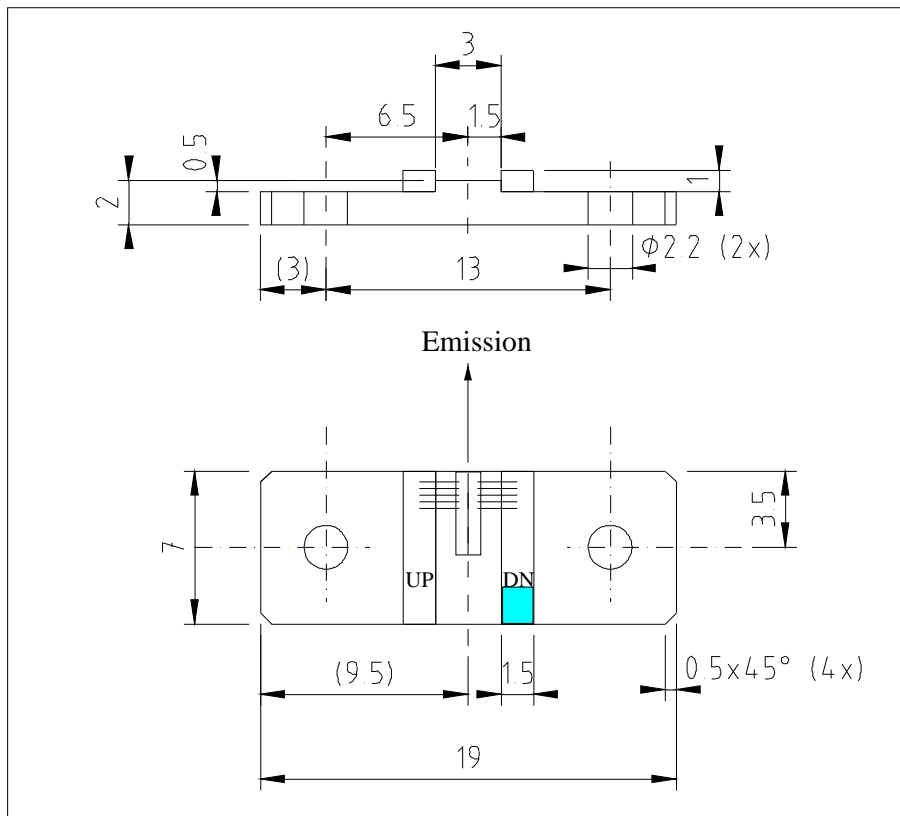


Figure 1: Mechanical and electrical interface for #sbcw4822 DN (please note that the laser is connected to the DN pad drawn in blue)

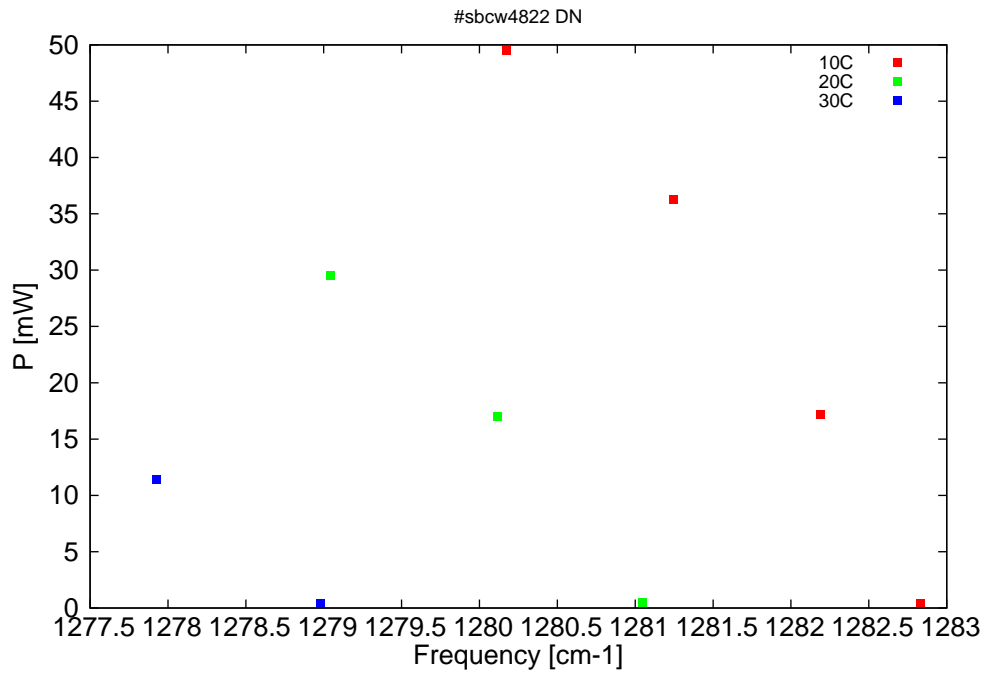


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

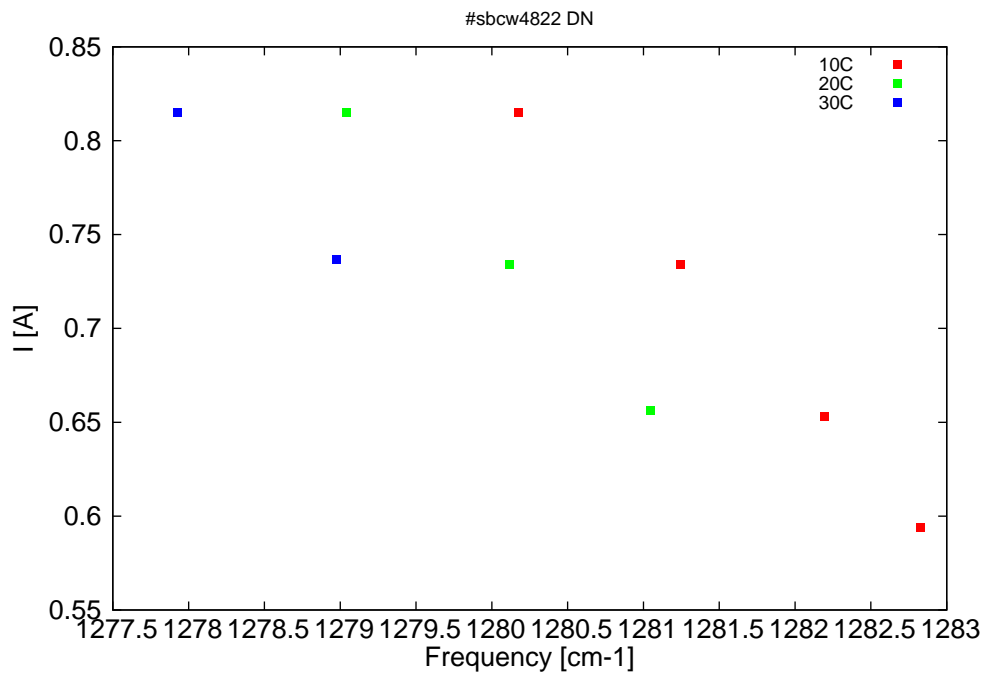


Figure 3: Applied DC current as a function of singlemode emission frequencies and temperatures

λ [nm]	ν [cm ⁻¹]	P[mW]	Temp[°C]	U_{LASER} [V]	I[A]
7795.3	1282.8	0.4	10	8.09	0.594
7799.1	1282.2	17.2	10	8.25	0.653
7804.9	1281.2	36.3	10	8.46	0.734
7811.4	1280.2	49.5	10	8.69	0.815
7806.1	1281	0.5	20	8.18	0.657
7811.8	1280.1	17	20	8.39	0.734
7818.3	1279	29.5	20	8.61	0.815
7818.8	1279	0.4	30	8.33	0.737
7825.2	1277.9	11.4	30	8.54	0.815

Table 1: Singlemode optical output power as function of operating parameters.

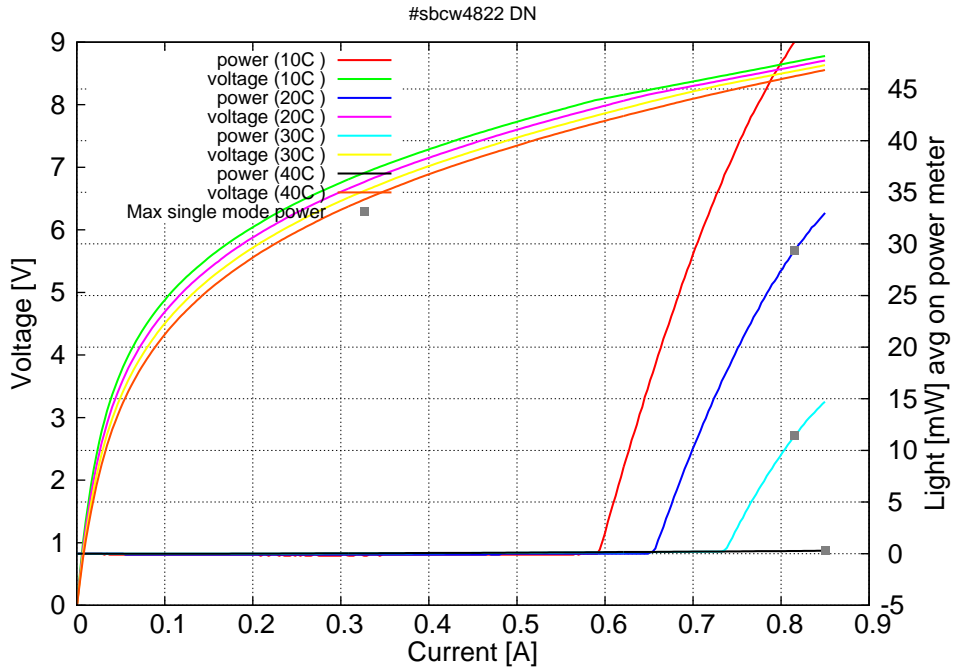


Figure 4: voltage and avg power vs current in continuous-wave operation (the solid squares indicate the maximum singlemode emitted power)

Note: at 10C: $I_{th}=0.58A$ / $V_{th}=8.1V$ (2-wires measurements). Maximum operation current: 0.85A for all temperatures.

Figure 3: spectra at different temperatures for various DC currents

