

Datasheet for #sbcw19746 DN

Recommendations:

Please read the User Manual and have a look at the FAQ at
<http://www.alpeslasers.ch/?a=142>

WARNING: Operating the laser with higher current or voltage than specified in this document may cause damage and will result in loss of warranty, unless Alpes Lasers has permitted to do so!

WARNING: Beware of the polarity of the laser. This laser has to be powered with negative bias and positive bias on the specific zones drawn below. To be used with a high compliance CW laser driver capable of reaching the operating current and voltage indicated in this datasheet, or up to 2.5A/20V.



Figure 1: Mechanical and electrical interface for #sbcw19746 DN (please note that AlN submount numbering is A0TNG)

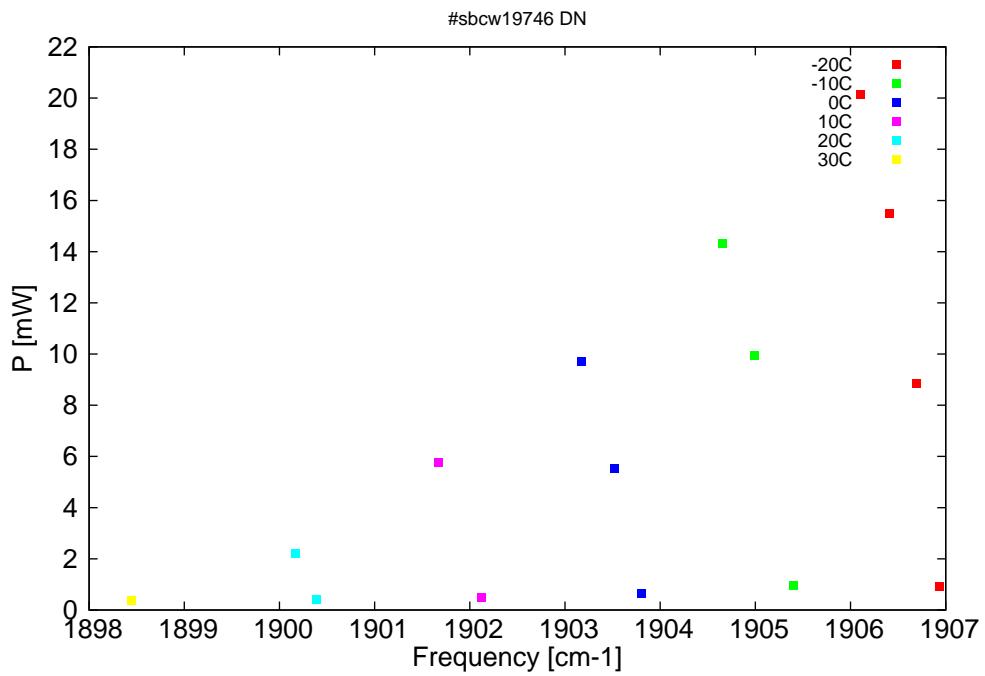


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

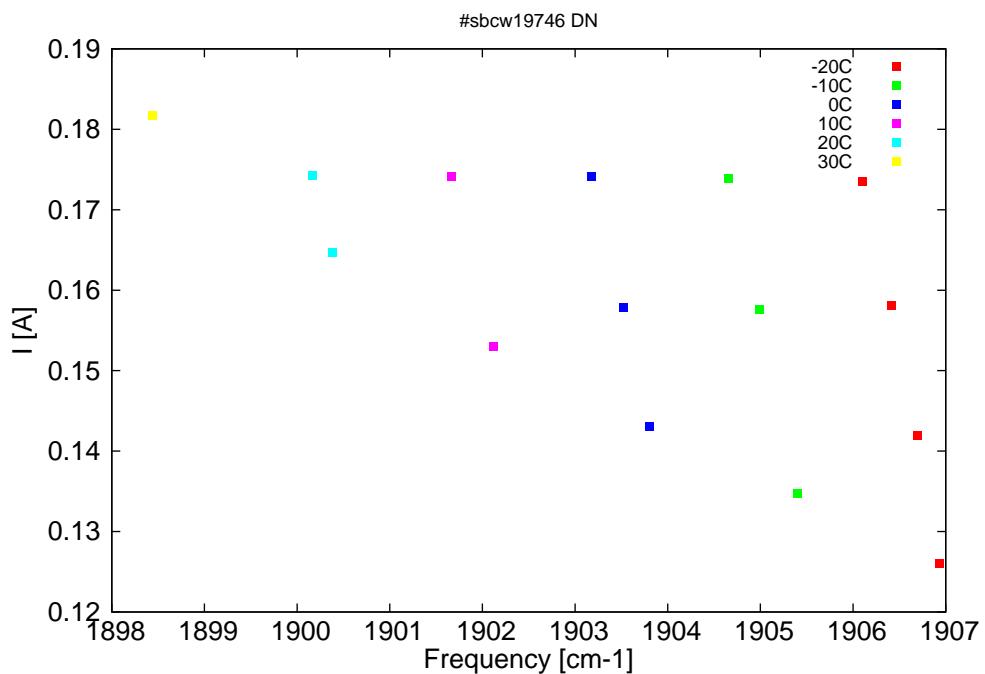


Figure 3: Applied DC current as a function of singlemode emission frequencies and temperatures

λ [nm]	ν [cm $^{-1}$]	P[mW]	Temp[°C]	U_{LASER} [V]	I[A]
5244	1906.9	0.9	-20	8.21	0.126
5244.7	1906.7	8.8	-20	8.43	0.142
5245.5	1906.4	15.5	-20	8.66	0.158
5246.3	1906.1	20.1	-20	8.9	0.174
5248.3	1905.4	1	-10	8.29	0.135
5249.4	1905	9.9	-10	8.62	0.158
5250.3	1904.7	14.3	-10	8.88	0.174
5252.6	1903.8	0.7	0	8.38	0.143
5253.4	1903.5	5.5	0	8.6	0.158
5254.4	1903.2	9.7	0	8.85	0.174
5257.3	1902.1	0.5	10	8.49	0.153
5258.5	1901.7	5.8	10	8.82	0.174
5262.1	1900.4	0.4	20	8.64	0.165
5262.7	1900.2	2.2	20	8.79	0.174
5267.5	1898.4	0.4	30	8.88	0.182

Table 1: Singlemode optical output power as function of operating parameters.

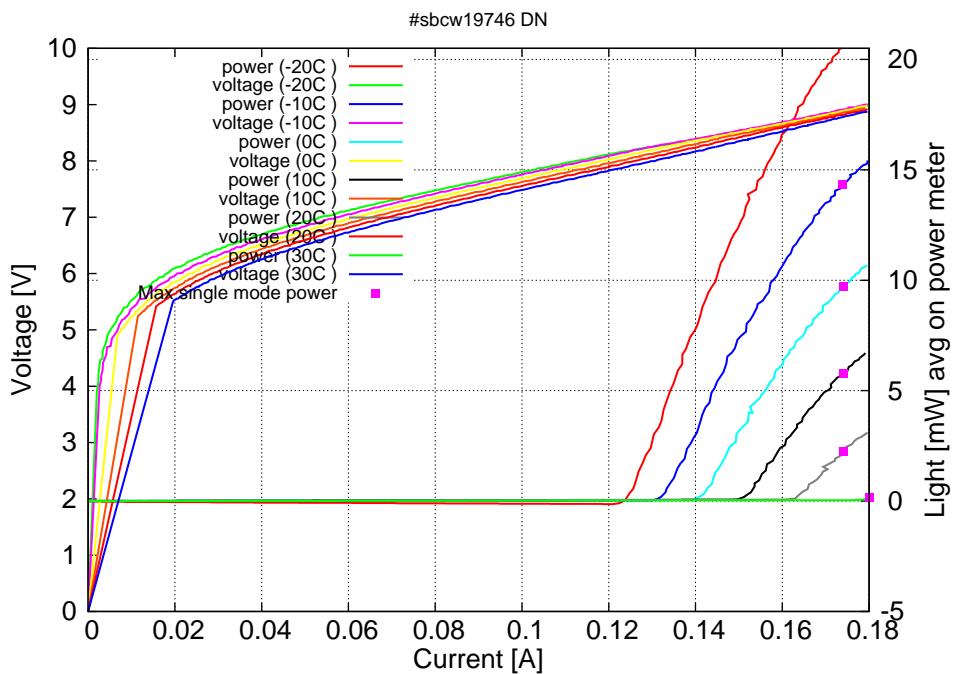


Figure 4: voltage and avg power vs current in continuous-wave operation (the solid squares indicate the maximum singlemode emitted power)

Note: at -20C: $I_{th}=0.12A$ / $V_{th}=8.2V$ (2-wires measurements). Maximum operation current: 0.18A for all temperatures.

Figure 3: spectra at different temperatures for various DC currents

