

## Datasheet for #sbcw19749 DN

### Recommendations:

Please read the User Manual and have a look at the FAQ at  
<http://www.alpeslasers.ch/?a=142>

**WARNING:** Operating the laser with higher current or voltage than specified in this document may cause damage and will result in loss of warranty, unless Alpes Lasers has permitted to do so!

**WARNING:** Beware of the polarity of the laser. This laser has to be powered with negative bias and positive bias on the specific zones drawn below. To be used with a high compliance CW laser driver capable of reaching the operating current and voltage indicated in this datasheet, or up to 2.5A/20V.



Figure 1: Mechanical and electrical interface for #sbcw19749 DN (please note that AlN submount numbering is A0T51)

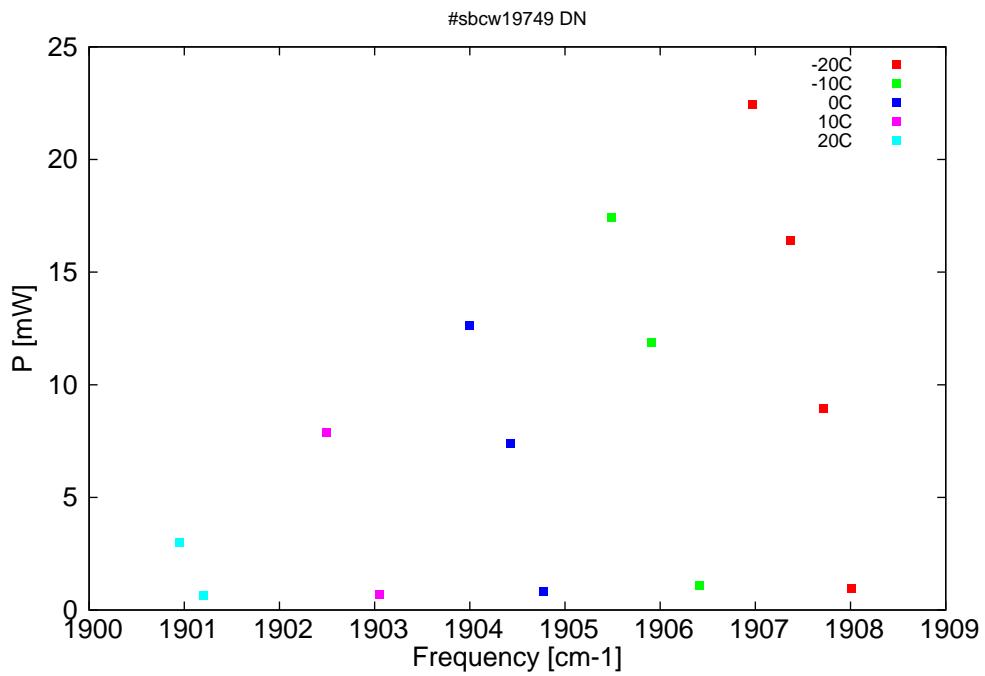


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

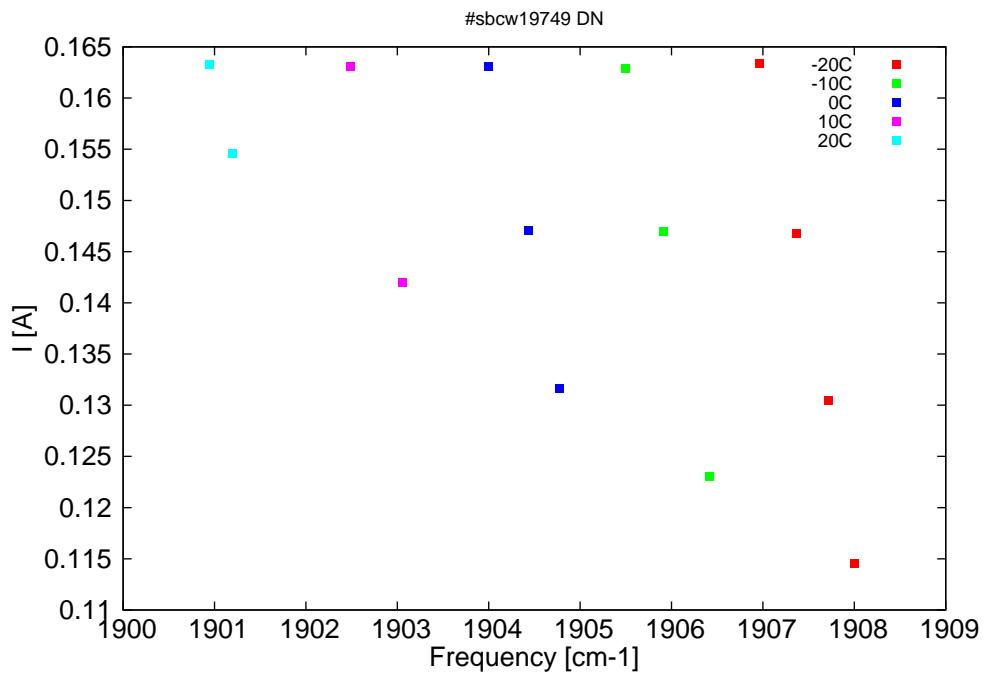


Figure 3: Applied DC current as a function of singlemode emission frequencies and temperatures

$\lambda$ [nm]	$\nu$ [cm $^{-1}$ ]	P[mW]	Temp[°C]	$U_{LASER}$ [V]	I[A]
5241.1	1908	1	-20	8.21	0.115
5241.9	1907.7	8.9	-20	8.46	0.13
5242.8	1907.4	16.4	-20	8.73	0.147
5243.9	1907	22.4	-20	9.04	0.163
5245.4	1906.4	1.1	-10	8.31	0.123
5246.8	1905.9	11.9	-10	8.71	0.147
5248	1905.5	17.4	-10	9.01	0.163
5250	1904.8	0.8	0	8.42	0.132
5250.9	1904.4	7.4	0	8.69	0.147
5252.1	1904	12.6	0	8.99	0.163
5254.7	1903.1	0.7	10	8.58	0.142
5256.3	1902.5	7.9	10	8.97	0.163
5259.8	1901.2	0.7	20	8.78	0.155
5260.5	1900.9	3	20	8.95	0.163

Table 1: Singlemode optical output power as function of operating parameters.

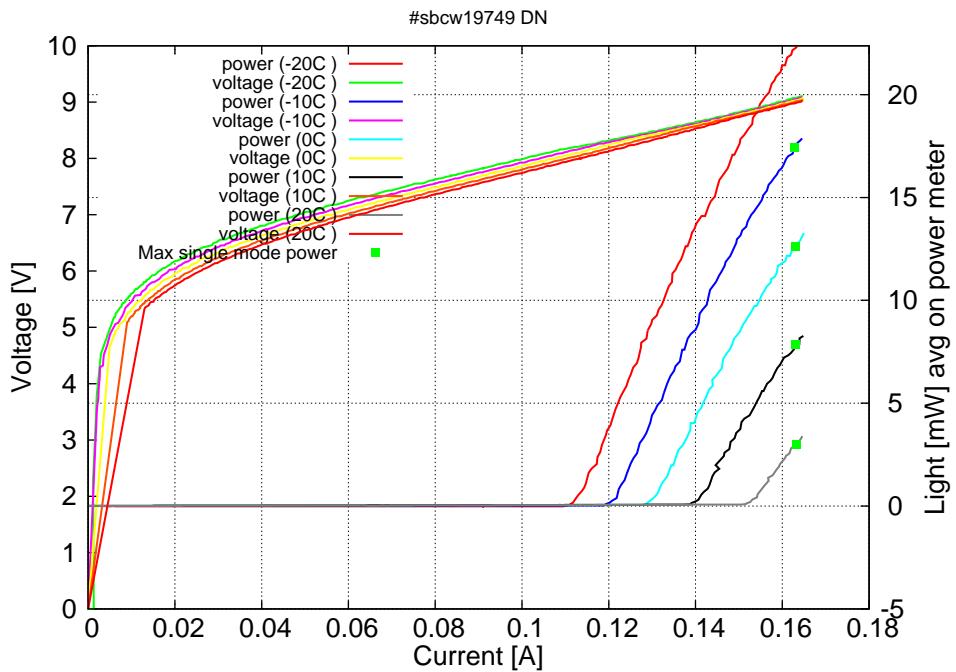


Figure 4: voltage and avg power vs current in continuous-wave operation (the solid squares indicate the maximum singlemode emitted power)

Note: at -20C:  $I_{th}=0.11A$  /  $V_{th}=8.2V$  (2-wires measurements). Maximum operation current: 0.165A for all temperatures.

Figure 3: spectra at different temperatures for various DC currents

