

Datasheet for #sbcw19821 DN

Recommendations:

Please read the User Manual and have a look at the FAQ at <http://www.alpeslasers.ch/?a=142>

WARNING: Operating the laser with higher current or voltage than specified in this document may cause damage and will result in loss of warranty, unless Alpes Lasers has permitted to do so!

WARNING: Beware of the polarity of the laser. This laser has to be powered with negative bias and positive bias on the specific zones drawn below. To be used with a high compliance CW laser driver capable of reaching the operating current and voltage indicated in this datasheet, or up to 2.5A/20V.



Figure 1: Mechanical and electrical interface for #sbcw19821 DN (please note that AlN submount numbering is A0NCZ)

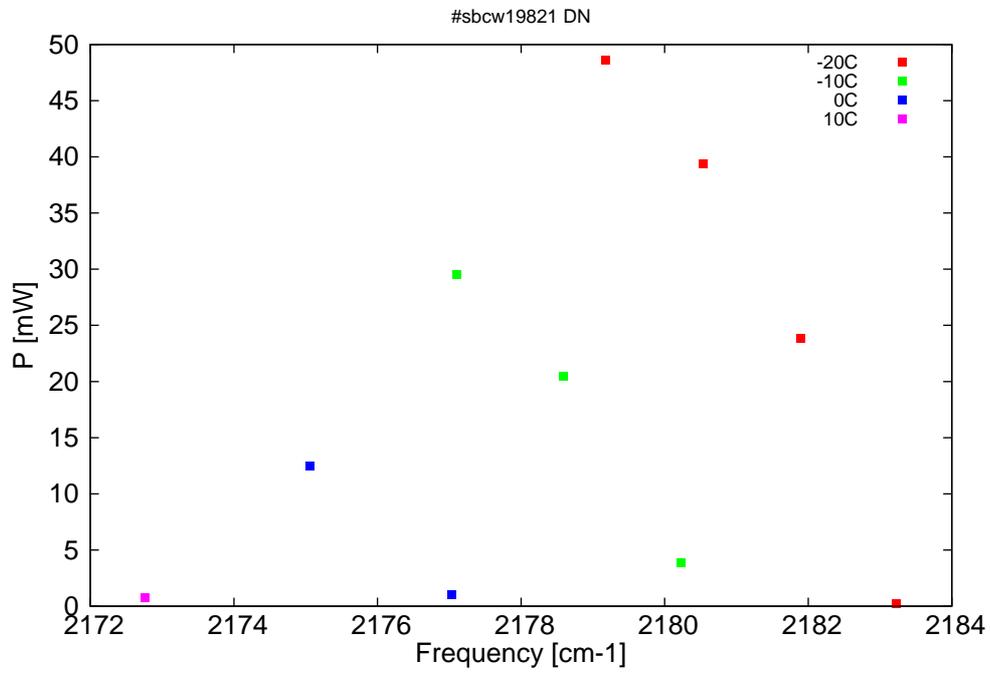


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

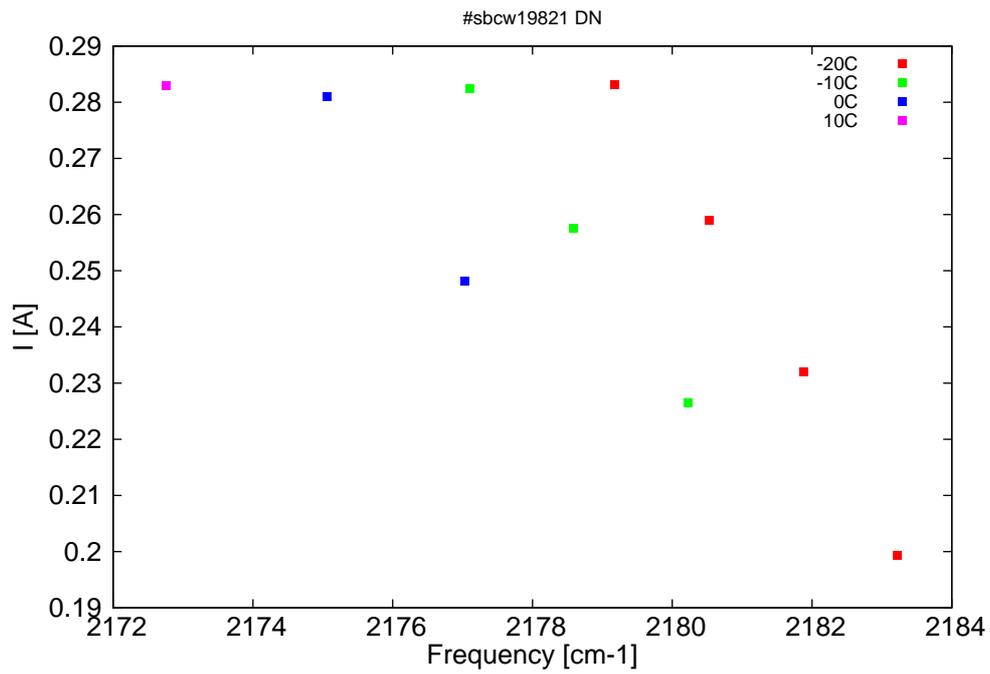


Figure 3: Applied DC current as a function of singlemode emission frequencies and temperatures

λ [nm]	ν [cm ⁻¹]	P[mW]	Temp[°C]	U_{LASER} [V]	I[A]
4580.4	2183.2	0.2	-20	9.14	0.199
4583.2	2181.9	23.9	-20	9.37	0.232
4586	2180.5	39.4	-20	9.59	0.259
4588.9	2179.2	48.6	-20	9.81	0.283
4586.7	2180.2	3.9	-10	9.25	0.226
4590.1	2178.6	20.5	-10	9.51	0.258
4593.3	2177.1	29.5	-10	9.73	0.282
4593.4	2177	1.1	0	9.38	0.248
4597.6	2175.1	12.5	0	9.67	0.281
4602.4	2172.8	0.8	10	9.65	0.283

Table 1: Singlemode optical output power as function of operating parameters.

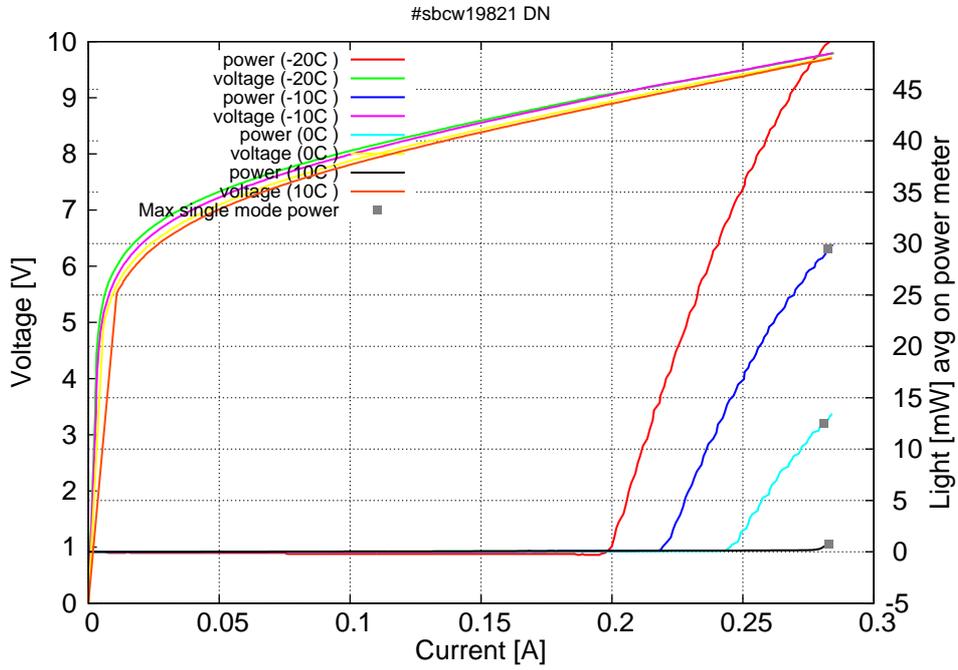


Figure 4: voltage and avg power vs current in continuous-wave operation (the solid squares indicate the maximum singlemode emitted power)

Note: at -20C: $I_{th}=0.20A$ / $V_{th}=9.0V$ (2-wires measurements). Maximum operation current: 0.285A for all temperatures.

Figure 3: spectra at different temperatures for various DC currents

