

Datasheet for #sbcw27035 DN

Recommendations:

Please read the User Manual and have a look at the FAQ at <https://www.alpeslasers.ch/resources/#faq>

WARNING: Operating the laser with higher current or voltage than specified in this document may cause damage and will result in loss of warranty, unless Alpes Lasers has permitted to do so!

WARNING: Beware of the polarity of the laser. This laser has to be powered with negative bias and positive bias on the specific zones drawn below. To be used with a high compliance CW laser driver capable of reaching the operating current and voltage indicated in this datasheet, or up to 2.5A/20V.



Figure 1: Mechanical and electrical interface for #sbcw27035 DN (please note that AlN submount numbering is A0Y4G)

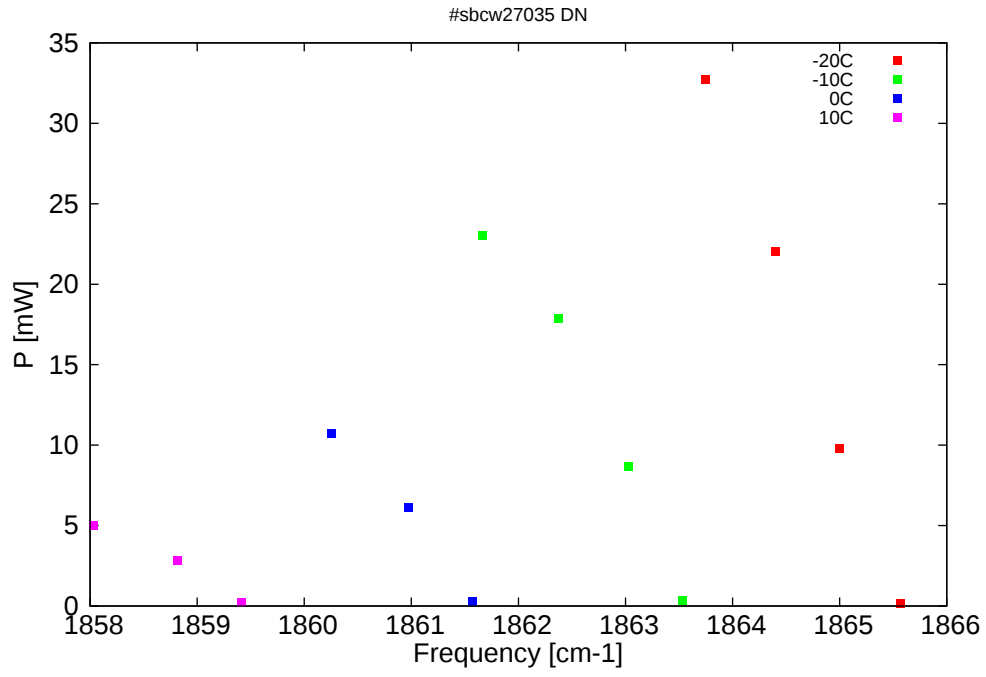


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

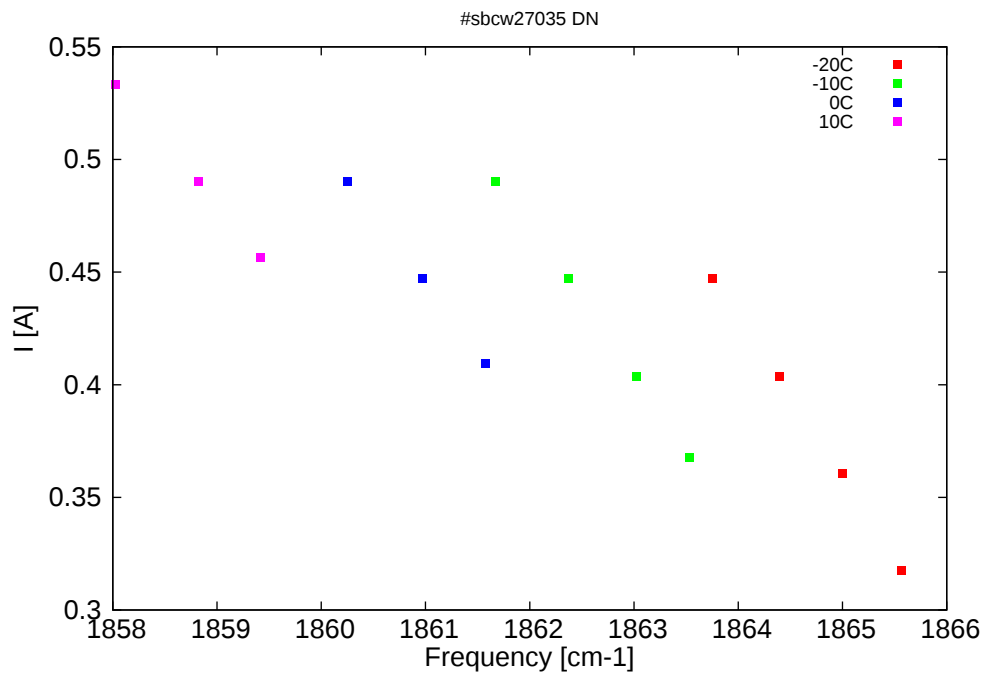


Figure 3: Applied DC current as a function of singlemode emission frequencies and temperatures

λ [nm]	ν [cm ⁻¹]	P[mW]	Temp[°C]	U_{LASER} [V]	I[A]
5360.3	1865.6	0.2	-20	8.95	0.318
5361.9	1865	9.8	-20	9.17	0.361
5363.7	1864.4	22.1	-20	9.39	0.404
5365.5	1863.8	32.7	-20	9.61	0.447
5366.2	1863.5	0.3	-10	9.13	0.368
5367.6	1863	8.7	-10	9.31	0.404
5369.5	1862.4	17.8	-10	9.52	0.447
5371.5	1861.7	23.1	-10	9.73	0.49
5371.8	1861.6	0.3	0	9.26	0.409
5373.5	1861	6.1	0	9.44	0.447
5375.6	1860.3	10.7	0	9.65	0.49
5378	1859.4	0.2	10	9.42	0.456
5379.8	1858.8	2.8	10	9.58	0.49
5382	1858	5	10	9.78	0.533

Table 1: Singlemode optical output power as function of operating parameters.

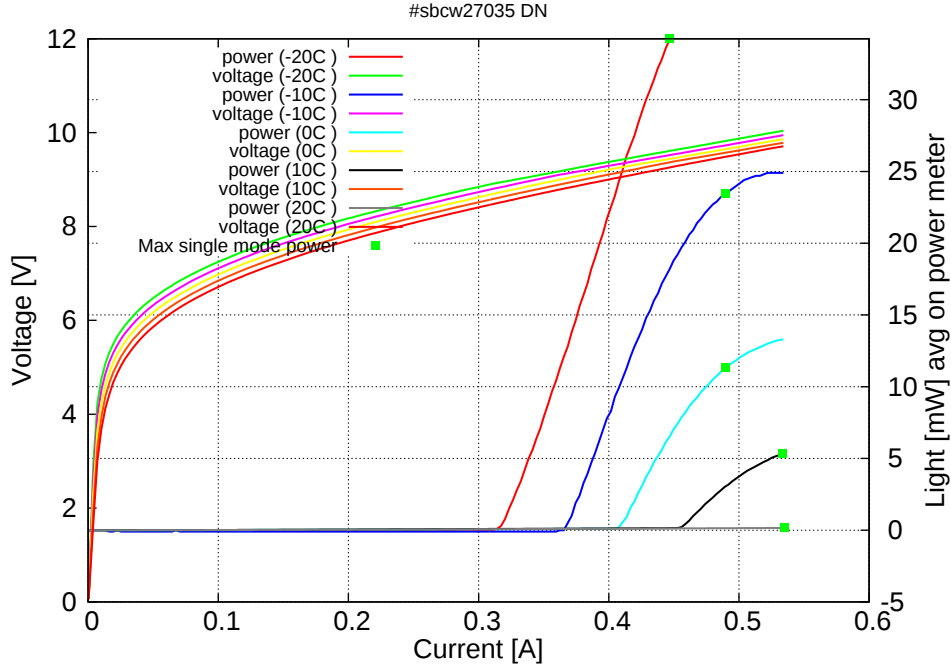


Figure 4: voltage and avg power vs current in continuous-wave operation (the solid squares indicate the maximum singlemode emitted power)

Note: at -20C: $I_{th}=0.31A$ / $V_{th}=8.9V$ (2-wires measurements). Maximum operation current: 0.45A at -20C, 0.49A between -10C and 0C, 0.535A at 10C.

Figure 3: spectra at different temperatures for various DC currents

