

**Datasheet for #sbcw24936 DN**

Recommendations:

Please read the User Manual and have a look at the FAQ at <http://www.alpeslasers.ch/?a=142>

**WARNING:** Operating the laser with higher current or voltage than specified in this document may cause damage and will result in loss of warranty, unless Alpes Lasers has permitted to do so!

**WARNING:** Beware of the polarity of the laser. This laser has to be powered with negative bias and positive bias on the specific zones drawn below. To be used with a high compliance CW laser driver capable of reaching the operating current and voltage indicated in this datasheet, or up to 2.5A/20V.

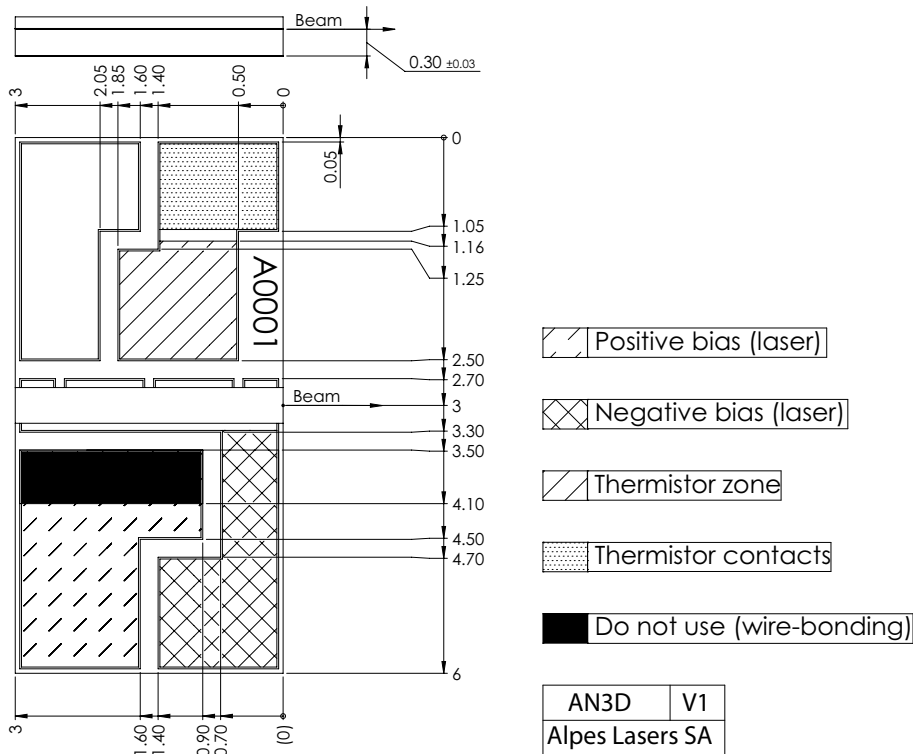


Figure 1: Mechanical and electrical interface for #sbcw24936 DN (please note that AlN submount numbering is P2803)

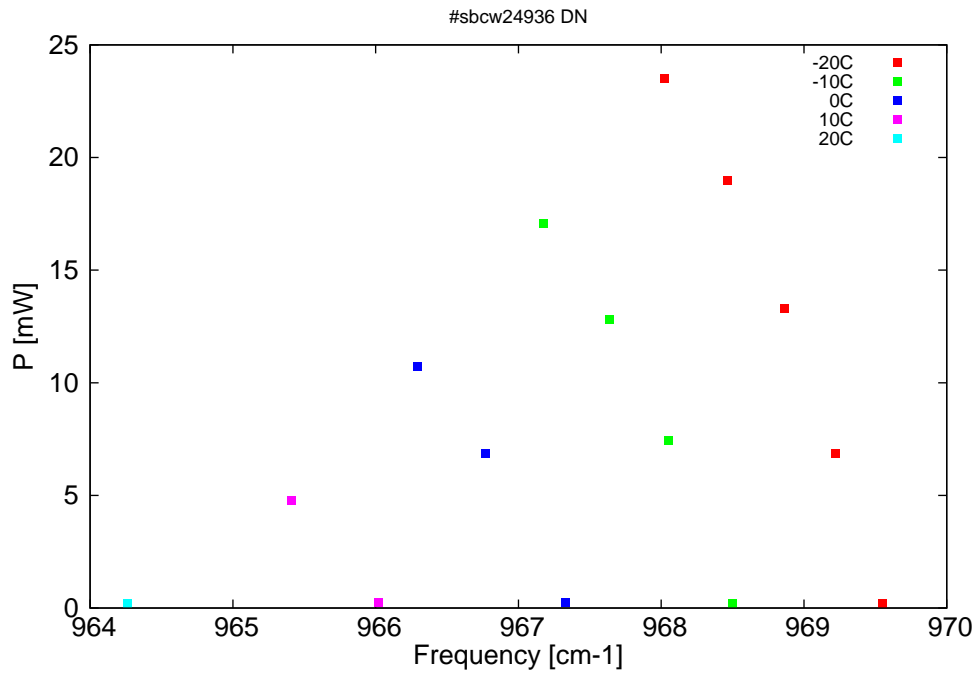


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

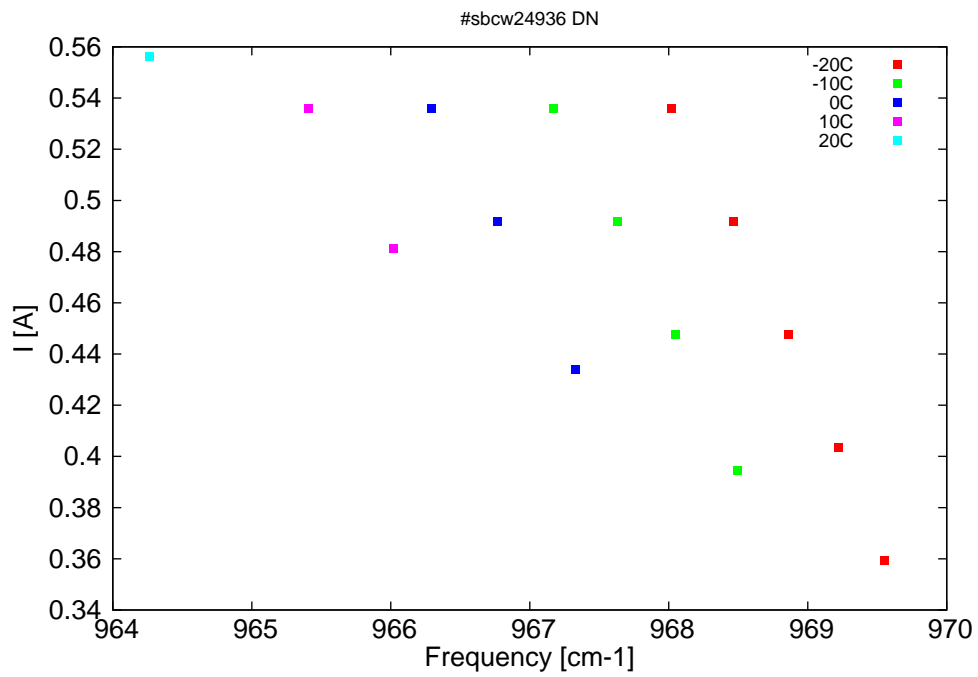


Figure 3: Applied DC current as a function of singlemode emission frequencies and temperatures

$\lambda$ [nm]	$\nu$ [cm <sup>-1</sup> ]	P[mW]	Temp[°C]	$U_{LASER}$ [V]	I[A]
10314	969.6	0.2	-20	8.77	0.359
10317.5	969.2	6.9	-20	9.06	0.404
10321.4	968.9	13.3	-20	9.36	0.448
10325.6	968.5	19	-20	9.68	0.492
10330.4	968	23.5	-20	10.04	0.536
10325.3	968.5	0.2	-10	8.98	0.395
10330.1	968	7.4	-10	9.35	0.448
10334.5	967.6	12.8	-10	9.68	0.492
10339.4	967.2	17.1	-10	10.04	0.536
10337.7	967.3	0.2	0	9.23	0.434
10343.7	966.8	6.8	0	9.67	0.492
10348.9	966.3	10.7	0	10.03	0.536
10351.7	966	0.2	10	9.58	0.481
10358.3	965.4	4.8	10	10.03	0.536
10370.6	964.3	0.2	20	10.2	0.556

Table 1: Singlemode optical output power as function of operating parameters.

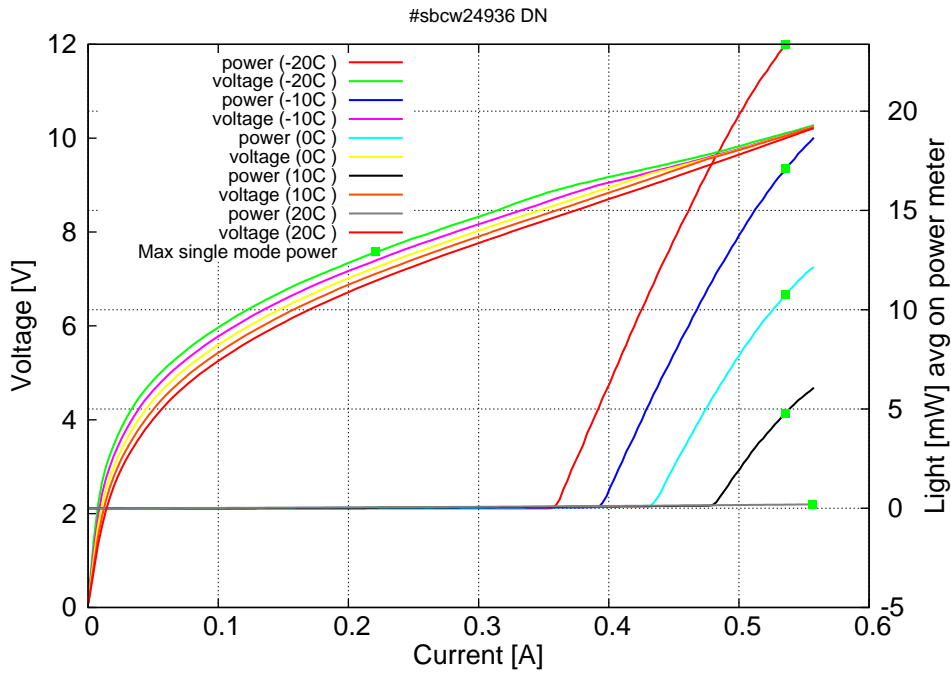


Figure 4: voltage and avg power vs current in continuous-wave operation (the solid squares indicate the maximum singlemode emitted power)

Note: at -20C:  $I_{th}=0.35A$  /  $V_{th}=8.9V$  (2-wires measurements). Maximum operation current: 0.560A for all temperatures.

Figure 3: spectra at different temperatures for various DC currents

