

Datasheet for #sbcw20356 DN

Recommendations:

Please read the User Manual and have a look at the FAQ at
<http://www.alpeslasers.ch/?a=142>

WARNING: Operating the laser with higher current or voltage than specified in this document may cause damage and will result in loss of warranty, unless Alpes Lasers has permitted to do so!

WARNING: Beware of the polarity of the laser. This laser has to be powered with negative bias and positive bias on the specific zones drawn below. To be used with a high compliance CW laser driver capable of reaching the operating current and voltage indicated in this datasheet, or up to 2.5A/20V.



Figure 1: Mechanical and electrical interface for #sbcw20356 DN (please note that AlN submount numbering is A0PDH)

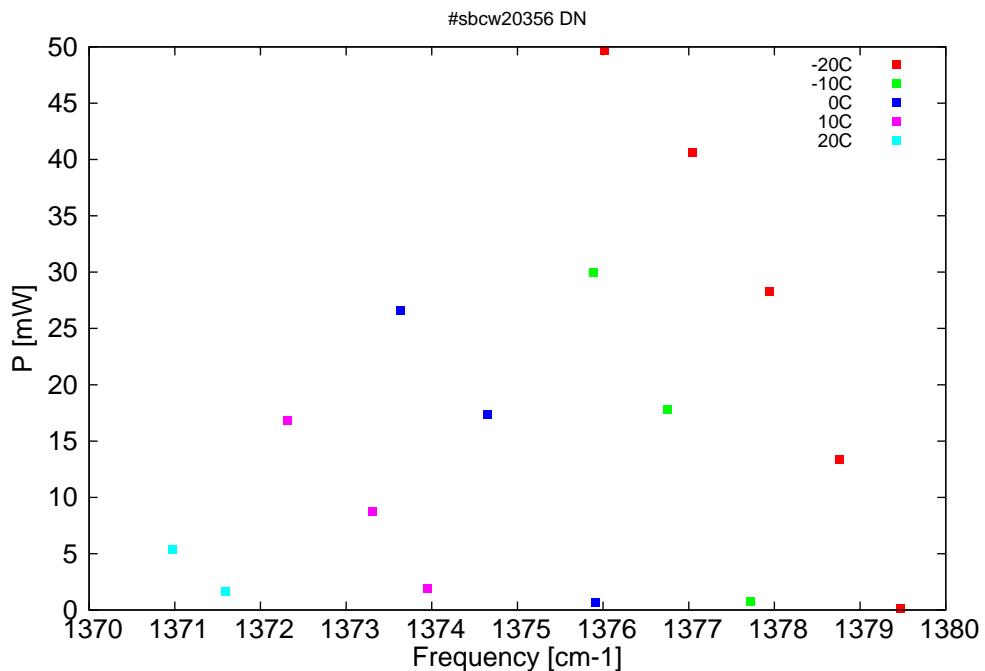


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

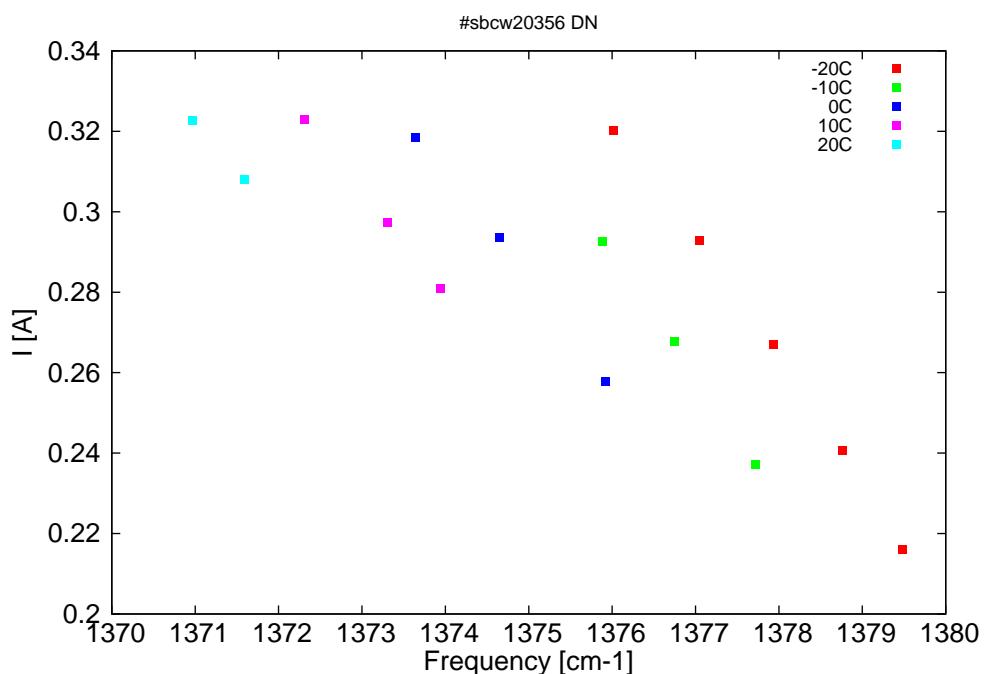


Figure 3: Applied DC current as a function of singlemode emission frequencies and temperatures

λ [nm]	ν [cm $^{-1}$]	P[mW]	Temp[°C]	U_{LASER} [V]	I[A]
7249.1	1379.5	0.1	-20	13.07	0.216
7252.9	1378.8	13.4	-20	13.48	0.241
7257.2	1377.9	28.3	-20	13.89	0.267
7261.9	1377	40.6	-20	14.3	0.293
7267.4	1376	49.7	-20	14.76	0.32
7258.4	1377.7	0.7	-10	13.21	0.237
7263.5	1376.8	17.8	-10	13.69	0.268
7268	1375.9	30	-10	14.09	0.293
7267.9	1375.9	0.7	0	13.3	0.258
7274.6	1374.7	17.3	0	13.86	0.294
7279.9	1373.6	26.6	0	14.27	0.319
7278.3	1373.9	1.9	10	13.37	0.281
7281.7	1373.3	8.7	10	13.63	0.297
7287	1372.3	16.9	10	14.05	0.323
7290.8	1371.6	1.6	20	13.63	0.308
7294.1	1371	5.4	20	13.87	0.323

Table 1: Singlemode optical output power as function of operating parameters.

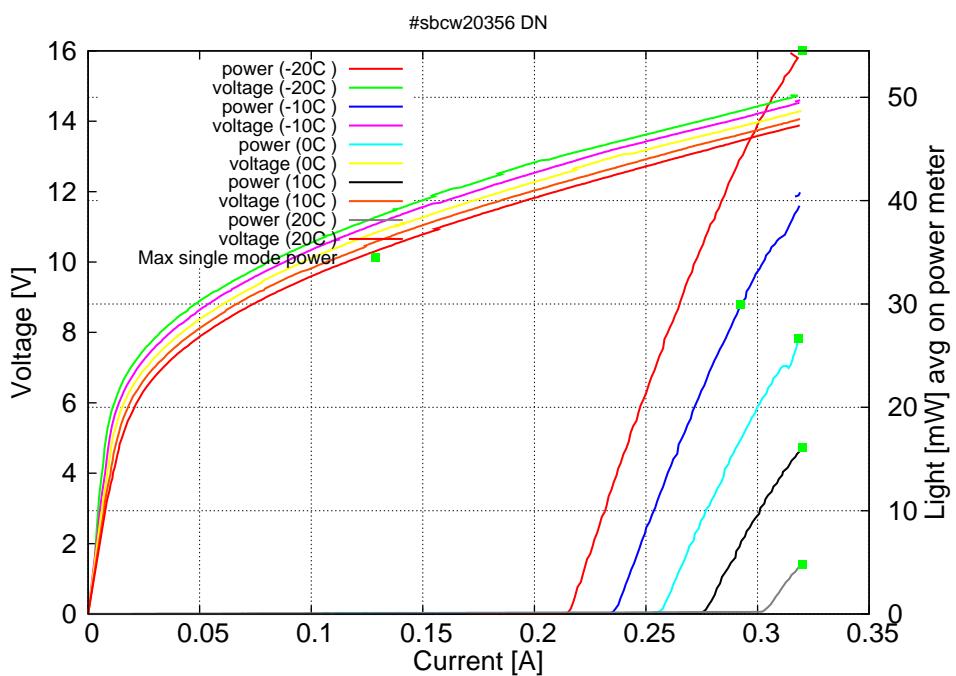


Figure 4: voltage and avg power vs current in continuous-wave operation (the solid squares indicate the maximum singlemode emitted power)

Note: at -20C: $I_{th}=0.22A$ / $V_{th}=13.1V$ (2-wires measurements). Maximum operation current: 0.32A for all temperatures.

Figure 3: spectra at different temperatures for various DC currents

