

Datasheet for #sbcw21151 DN

Recommendations:

Please read the User Manual and have a look at the FAQ at
<http://www.alpeslasers.ch/?a=142>

WARNING: Operating the laser with higher current or voltage than specified in this document may cause damage and will result in loss of warranty, unless Alpes Lasers has permitted to do so!

WARNING: Beware of the polarity of the laser. This laser has to be powered with negative current on the laser contact (= bonding pad, corresponding to the label "laser" on the LLH) and the positive current on the base contact (= submount, corresponding to the label "base" on the LLH). To be used with a high compliance CW laser driver capable of reaching the operating current and voltage indicated in this datasheet, or up to 2.5A/20V.

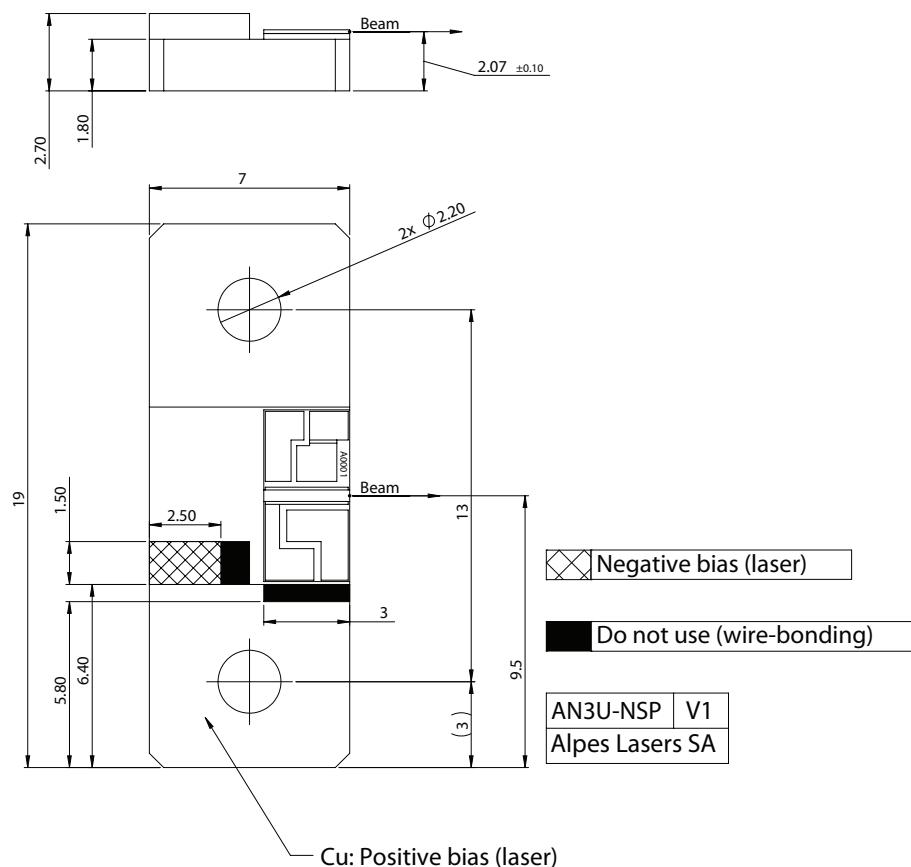


Figure 1: Mechanical and electrical interface for #sbcw21151 DN

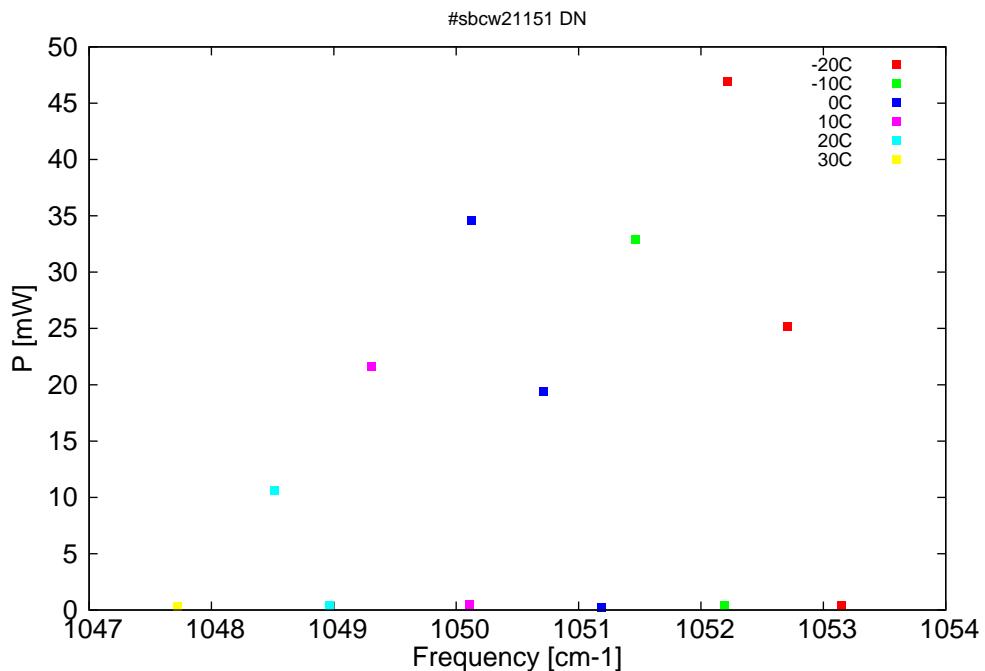


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

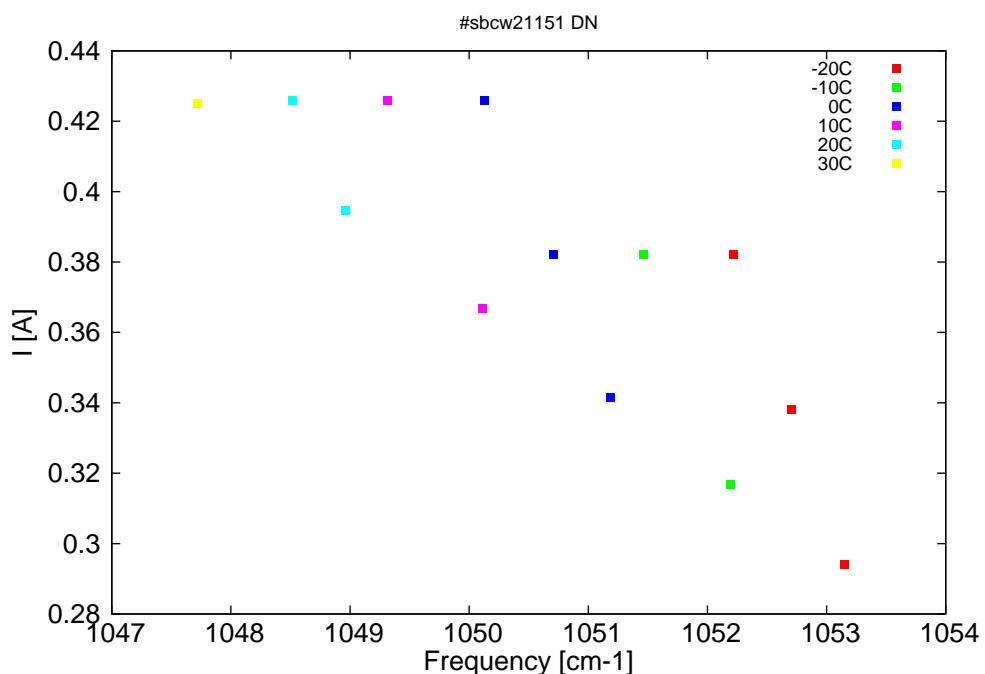


Figure 3: Applied DC current as a function of singlemode emission frequencies and temperatures

λ [nm]	ν [cm $^{-1}$]	P[mW]	Temp[°C]	U_{LASER} [V]	I[A]
9495.3	1053.2	0.4	-20	9.07	0.294
9499.4	1052.7	25.2	-20	9.34	0.338
9503.8	1052.2	46.9	-20	9.59	0.382
9503.9	1052.2	0.4	-10	9.1	0.317
9510.5	1051.5	32.9	-10	9.5	0.382
9513	1051.2	0.2	0	9.16	0.341
9517.4	1050.7	19.4	0	9.42	0.382
9522.6	1050.1	34.6	0	9.68	0.426
9522.8	1050.1	0.5	10	9.23	0.367
9530.1	1049.3	21.6	10	9.6	0.426
9533.2	1049	0.4	20	9.33	0.395
9537.3	1048.5	10.6	20	9.54	0.426
9544.5	1047.7	0.3	30	9.47	0.425

Table 1: Singlemode optical output power as function of operating parameters.

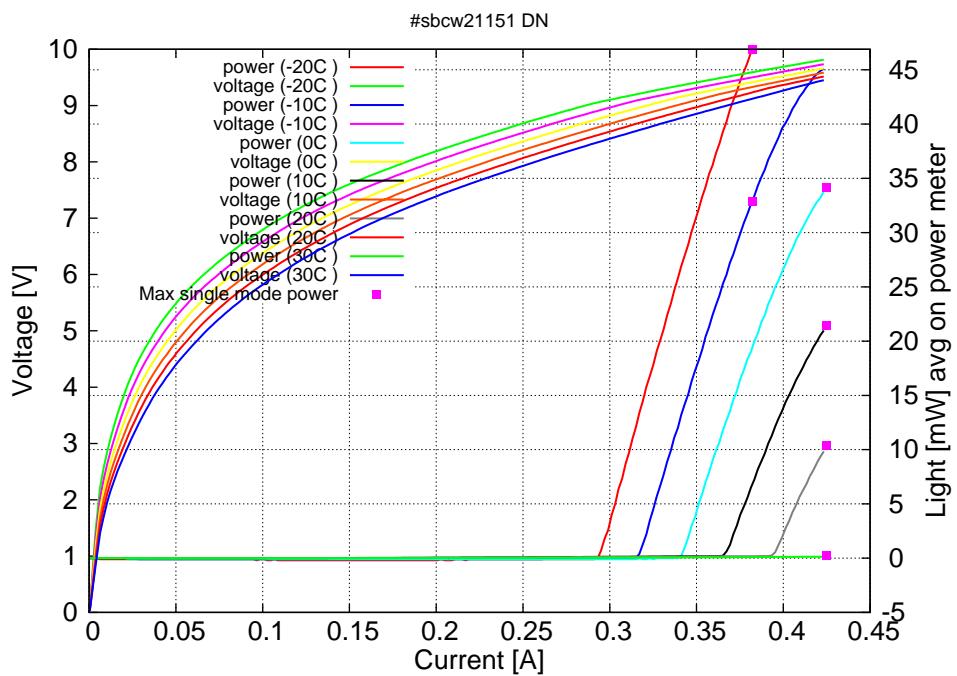


Figure 4: voltage and avg power vs current in continuous-wave operation (the solid squares indicate the maximum singlemode emitted power)

Note: at -20C: $I_{th}=0.29A$ / $V_{th}=9.0V$ (2-wires measurements). Maximum operation current: 0.385A between -20C and -10C, 0.425A between 0C and 40C.

Figure 3: spectra at different temperatures for various DC currents

